

Modular USB for Rx manual




Plug and play. Just connect your Dominator module on it and use.

Small size, 46 * 26 mm without USB connector.

Changeable Rx feature, you can use 910MHz, 1.3GHz, 2.4GHz and 5.8GHz Dominator modules as well.

Channels can change with 3 Pin Dip switch.

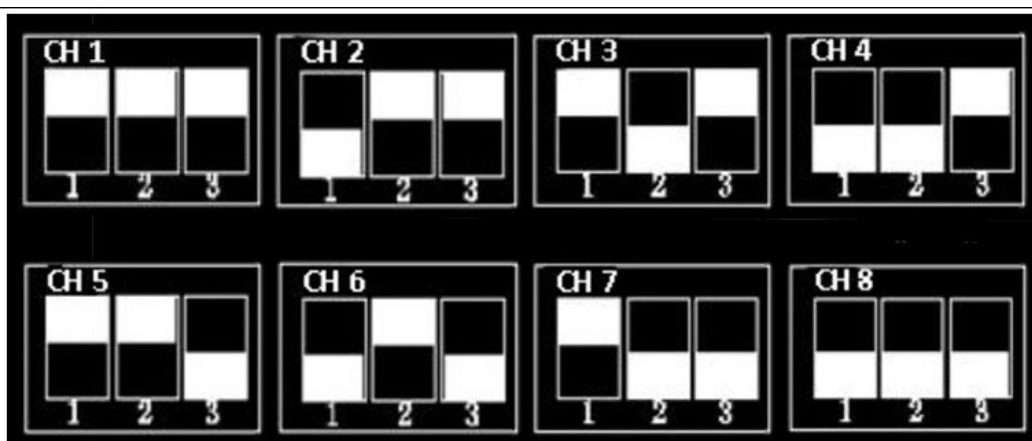

CHANNELS

3.5 mm headphone socket is for Audio.

6.0MHz and 6.5MHz Audio subcarrier can selectable through switch.

MAC, Windows 7, Windows 8, Windows 8.1, Windows 10 (32 and 64 bit)

Program setup

1) Download the below program (41.3 KB) :


http://www.watec.co.jp/English/eng_others/WatecCameraViewer_en_v1_20.zip

2) Unzip the program in to new folder.


3) Connect USB Rx module to your computer, Wait until you install the USB device software.

4) "USB device software has been successfully installed" information will appear on the screen.

5) Run the program

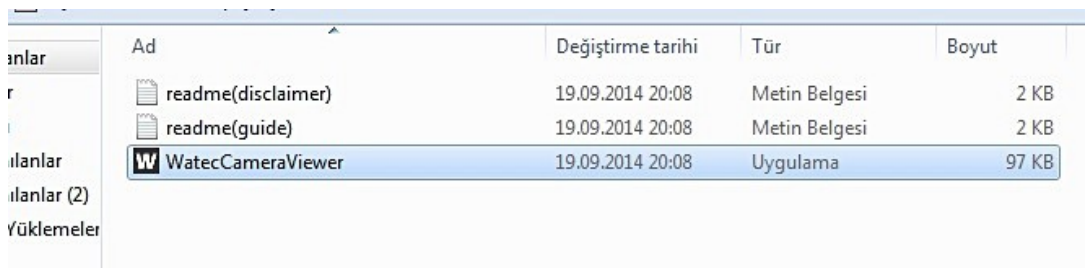


6) Choose USB 2.0 PC Camera from Devices

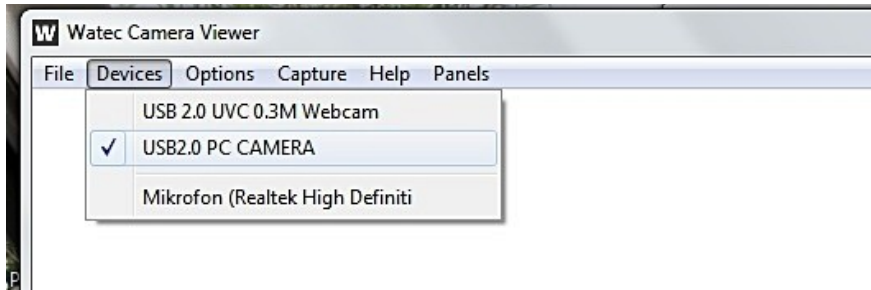

7) Choose Preview from Options



8) You can set the Windows as 640*480 from Video Capture Pin.

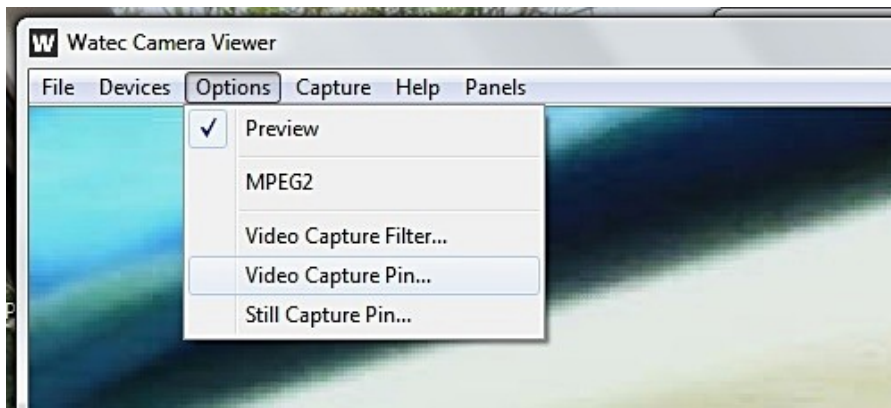

9) You can adjust the color, brightness, sharpness, etc. From Video Capture Filter.

